

LOCATIONS

FUNCTIONAL LOCATIONS - WARRANTY

Ribbon Access: Equipment / Locations > Functional Locations




1. The *Functional Locations* screen will be displayed.

SELECT THE SITE

- 2. This screen will open by default with the Sites filter set to All Sites.
- 3. You do not need to select a specific site, however if you wish to narrow your filter parameters, you can click on the drop-down *arrow* and select a particular site from the list.



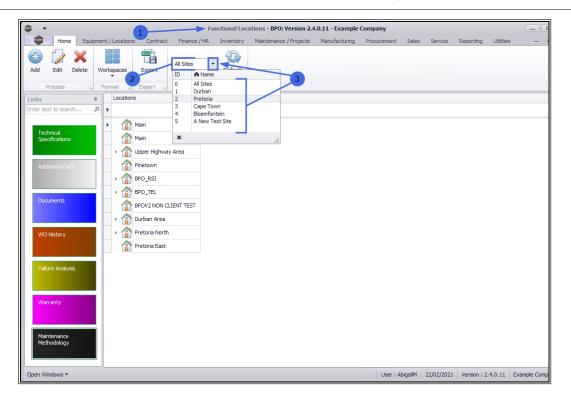

SELECT THE LOCATION

1. Select the **row** of the **location** where you wish to view the Warranty.


MAIN LOCATION

2. If you wish to view the Warranty of a <u>main</u> location, select the **row** of that main location. In this example **Upper Highway Area** is a main location.

SUB-LOCATION

- 3. If you wish to view the Warranty for a <u>sub</u>-location, ensure that you expand the main (parent) location to be able to view and select the row of that sub-location. In this example, Hillcrest and Kloof are sub-locations of Upper Highway Area.
- 4. When you have selected the right location, click on the *Warranty* tile.



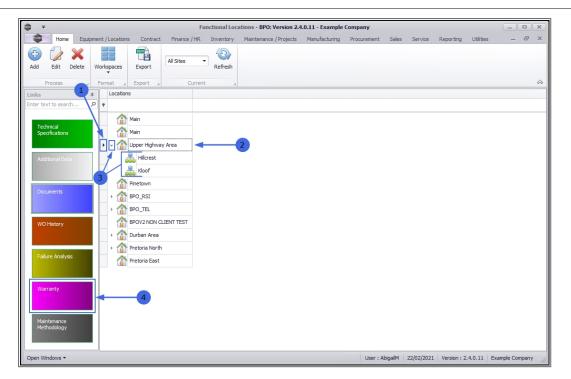


1. The Warranty for location: [] screen will open.

If there is a warranty currently linked to the selected location, you will be able to view the details here.


- Note that this is a <u>view only</u> screen, the information <u>cannot</u> be edited from here.
- 2. Selected Warranty:
- 3. Validity Details:
- 4. Click on **Back** to return to the **Functional Locations** listing screen.



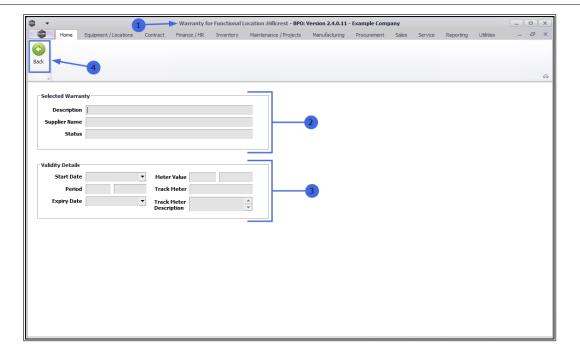

...

This topic is currently being updated. Thank you for your patience, please check back soon.

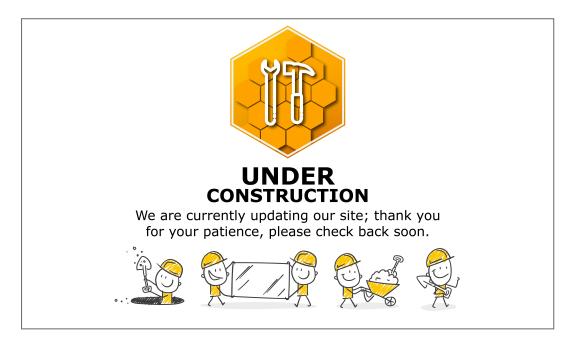

Related Topics



- Introduction to Functional Locations
- Add a New Functional Location
- Edit a Functional Location
- Delete a Functional Location
- Location Technical Specifications
- Location Additional Data
- Location Documents
- Location Work Order History
- Location Failure Analysis
- Location Maintenance Methodology
- Location Add a New Location Contract

MNU.001.008